

GOLDAIR



Fan Heater

Model: GFH003

Visit our web site!

www.buyprima.com

U.K. PLUG WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BROWN - LIVE (L)
BLUE - NEUTRAL (N)


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The BLUE wire is the NEUTRAL and must be connected to the terminal which is marked with the letter N or coloured BLACK
- The BROWN wire is the LIVE and must be connected to the terminal, which is marked with the letter L or coloured RED.

Always ensure that the cord grip is positioned and securely fastened.

WARNING: ON NO ACCOUNT MUST EITHER THE LIVE OR NEUTRAL WIRES BE CONNECTED TO THE EARTH TERMINAL

WIRING FOR A 13AMP PLUG

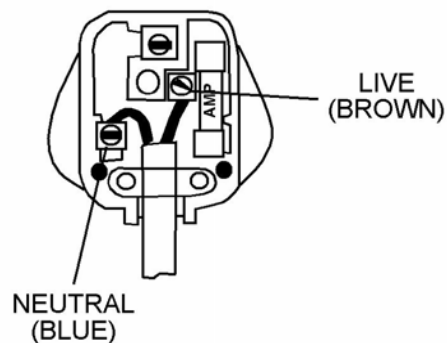

Introduction

Please read the following information carefully. It contains important instructions regarding the safe operation of this appliance. Please retain these instructions for future reference.

General Safety Information

1. Check that the mains voltage corresponds with the rating of the appliance before opening.
2. Read all instructions.
3. Do not touch hot surfaces – Use handles or knobs.
4. This product is intended for indoor use to temporarily heat rooms. Do not use the product for any other purpose.
5. Do not use the product while sleeping or place near a person sleeping.
6. Place the product on a flat, stable, heat-resistant surface.
7. This product has hot and arcing or sparking parts inside. Do not use it in area where gasoline, paint, or flammable materials are used or stored, as there may be a risk of fire or explosion.
8. Keep combustible materials, such as furniture, cushions, paper, clothes, and curtains at least three feet (0.9 meters) from the front of the heater and keep them away from the sides and rear.
9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or product damage.
10. To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use on soft surface, such as a seat cushion, where openings may become blocked.
11. Do not use this product to dry or heat clothing or any other item.
12. To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
13. Do not leave any appliance unattended while it is operating.
14. Close supervision is necessary when any appliance is used by or near children or infirm persons.
15. Unplug from outlet when not in use or before cleaning.
16. Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
17. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
18. Do not use outdoors.
19. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.

20. To disconnect – remove the plug from the outlet. Do not pull plug out by the cord.
21. Do not use this product for anything other than its intended use. This appliance is for household use only.
22. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
23. Never use the appliance near a bath, shower or a swimming pool.
24. Never immerse the heater in any liquid or water.
25. Never place flammable objects or clothing on top of the heater.

Please Note:

It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

Parts and controls



How to Use

- a) Place the product on a flat, stable, heat-resistant surface. Plug the Power Cord into a standard 230-volt AC electrical outlet.
- b) To set the heat settings turn the heat setting knob to either Fan (cool), warm or hot.
- c) To adjust the thermostat, turn the adjustable thermostat knob clockwise. The fan will switch on and off to keep the temperature at the selected temperature.
- d) Unplug the product from the electrical outlet when it is not in use or is left unattended.

Safety features

1. This heater is fitted with an overheating safety switch. The heater will switch off in case of accidental overheating. To re-set disconnect the plug from the power for a few minutes and then plug the appliance in again; checking that the air intake hasn't been obstructed and it is free of objects around it that could block it.

Cleaning

Always un-plug the heater from the wall socket and allow it to cool down before cleaning.
Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

Storage

When the heater is not used for long periods of time, it should be protected from dust and stored in a clean dry place.

~~~~~ Warranty ~~~~~

This product is guaranteed for 12 months from the date of purchase when the appliance is used solely for domestic purposes. For commercial use the product is guaranteed for 90 days from the date of purchase.

The guarantee is valid against mechanical or electrical defects if the product is used in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled, interfered with or damaged in any way.

IMPORTANT, PLEASE RETAIN THIS WARRANTY

Please ask your retailer to either stamp this warranty or simply attach your store receipt. Keep this warranty somewhere safe. DO NOT SEND TO PRIMA.

This guarantee in no way affects your rights under statutory law.

IF THE PRODUCT MALFUNCTIONS DURING ITS WARRANTY PERIOD IT MUST BE RETURNED TO THE RETAILER FROM WHOM IT WAS PURCHASED FOR REPLACEMENT. IF YOU BOUGHT THIS PRODUCT VIA MAIL ORDER, PLEASE KEEP ALL THE DOCUMENTATION THAT CAME WHEN THE UNIT WAS DELIVERED.

NAME _____

ADDRESS _____

PURCHASED FROM _____

DATE OF PURCHASE _____ **MODEL** _____

Please do not call us regarding warranties, your warranty exists with the retailer that you bought the product from. If the product malfunctions during its warranty period it must be returned to the retailer from whom it was purchased for replacement. If you bought this product via mail order, please keep all the documentation that came when the unit was delivered.

Nu-World UK Ltd, Prima House, 15 (2D) Springfield Commercial Centre, Bagley Lane, Leeds. LS28 5LY United Kingdom
www.buyprima.com

© Copyright 2006 Nu-World UK Ltd. All rights reserved.