

GOLDAIR



Fan Heater

Models: GS011

Visit our web site!

www.buyprima.com

U.K. PLUG WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BROWN	-	LIVE (L)
BLUE	-	NEUTRAL (N)
GREEN/YELLOW	-	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


- The BLUE wire is the NEUTRAL and must be connected to the terminal which is marked with the letter N or coloured BLACK
- The BROWN wire is the LIVE and must be connected to the terminal that is marked with the letter L or coloured RED.
- The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked E or coloured GREEN or GREEN/YELLOW.

Always ensure that the cord grip is positioned and securely fastened.

WARNING: THIS APPLIANCE MUST BE EARTHED.

If a 13A (BS1363) fused plug is used it must be fitted with a 13A fuse. If in doubt consult a qualified electrician.

WIRING FOR A 13AMP PLUG

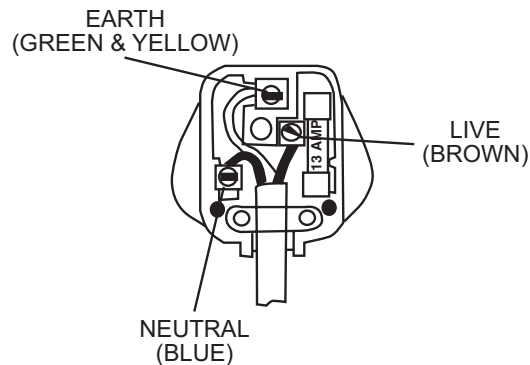

Introduction

Please read the following information carefully. It contains important instructions regarding the safe operation of this appliance. Please retain these instructions for future reference.

General Safety Information


1. Check that the mains voltage corresponds with the rating of the appliance before opening.
2. Read all instructions.
3. Do not touch hot surfaces – Use handles or knobs.
4. This product is intended for indoor use to temporarily heat rooms. Do not use the product for any other purpose.
5. Do not use the product while sleeping or place near a person sleeping.
6. Place the product on a flat, stable, heat-resistant surface.
7. This product has hot and arcing or sparking parts inside. Do not use it in area where gasoline, paint, or flammable materials are used or stored, as there may be a risk of fire or explosion.
8. Keep combustible materials, such as furniture, cushions, paper, clothes, and curtains at least three feet (0.9 meters) from the front of the heater and keep them away from the sides and rear.
9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or product damage.
10. To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use on soft surface, such as a seat cushion, where openings may become blocked.
11. Do not use this product to dry or heat clothing or any other item.
12. To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
13. Do not leave any appliance unattended while it is operating.
14. Close supervision is necessary when any appliance is used by or near children or infirm persons.
15. Unplug from outlet when not in use or before cleaning.
16. Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
17. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
18. Do not use outdoors.
19. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.

20. To disconnect – remove the plug from the outlet. Do not pull plug out by the cord.
21. Do not use this product for anything other than its intended use. This appliance is for household use only.
22. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
23. Never use the appliance near a bath, shower or a swimming pool.
24. Never immerse the heater in any liquid or water.
25. Never place flammable objects or clothing on top of the heater.

Please Note:

It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

Parts and controls

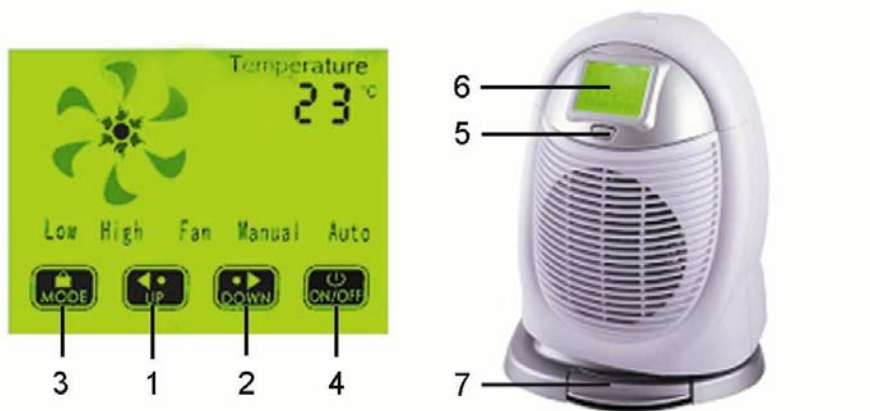

1. UP (+) BUTTON
2. DOWN (—) BUTTON
3. MODE BUTTON
4. ON/OFF BUTTON

5. MAIN POWER BUTTON
6. TOUCHING SCREEN DISPLAY
7. OSCILLATION SWITCH

How to Use

- a) Place the product on a flat, stable, heat-resistant surface. Plug the Power Cord into a standard 230-volt AC electrical outlet.
- b) To Switch on push the Main Power. The Touching Screen display will illuminate and show the current room temperature.
- c) Press the **ON/OFF** Button once to start the fan. The fan will start up in the **“Low” heat mode**. ‘Low’ will flash to indicate it is in this mode.
- d) To change the fan settings, press the **<UP** or **>DOWN** Buttons to switch among **Low, High, Fan (cool air), and AUTO**.
- e) In **Auto mode**, the thermostat will keep the temperature regulated around the ambient room temperature and switch between Low/High and Fan to keep this consistent.
- f) Press the ON/OFF Button again to switch off the heater. **Note:** the fan will continue to run for about 10 seconds before shutting off.
- g) Press the Main Power Button to switch the fan off completely.
- h) Unplug the product from the electrical outlet when it is not in use or is left unattended.

Manual Temperature Setting:

This heater is equipped with a thermostat that allows you to set the precise temperature desired. This feature operates only when in the Auto Mode.

1. While in Auto Mode, press the MODE Button until the word “Temperature” flashes.
2. Press the <UP or >DOWN Buttons to increase or decrease the temperature/thermostat setting.

Note: The Thermostat temperature range is 5°C to 24°C. The display will show the set temperature for ten seconds. If the room temperature is below your selected thermostat temperature, the heater will switch on to increase the room temperature until the preset temperature is reached. If it is above the room temperature that you have selected the fan will only run once the temperature has dropped below your chosen temperature.

Timer:

This heater is equipped with a timer that can be set for 1, 2, 4, 8, or 12 hours.

1. Press the MODE Button until the timer appears in the display.
Note: If heater is in Auto Mode, you will need to press the MODE Button twice to access the timer display.
2. Press the <UP or >DOWN Buttons to set the timer to the desired operation time. When the timer is set, countdown will begin after no buttons are pressed for five seconds. The display will continue to show the remaining time.
3. The heater will shut off when the set time has elapsed. **Note:** The fan motor will continue to run for 10 seconds for the heater to cool down.

To cancel the TIMER mode press the ON/OFF button.

NOTE: To reset the timer, it will need to be reprogrammed as detailed above.

Oscillation:

Gently press down the foot switch button located on the oscillation device, the heater will start to oscillate. To stop the fan oscillating press the button once more.

Safety features

1. A tip-over switch is built in to prevent operation if the heater is tipped over. The heater must be placed flat on the floor or the tip-over switch will shut it off automatically.
2. A thermal overload protector and a thermal fuse are built in to prevent overheating.

Cleaning

Always un-plug the heater from the wall socket and allow it to cool down before cleaning.
Clean the outside of the heater by wiping with a damp cloth and buff with a dry cloth. Do not use any detergents or abrasives and do not allow any water to enter the heater.

Storage

When the heater is not used for long periods of time, it should be protected from dust and stored in a clean dry place.

~~~~~ **Warranty** ~~~~~

This product is guaranteed for 12 months from the date of purchase when the appliance is used solely for domestic purposes. For commercial use the product is guaranteed for 90 days from the date of purchase.

The guarantee is valid against mechanical or electrical defects if the product is used in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled, interfered with or damaged in any way.

**IMPORTANT, PLEASE RETAIN THIS WARRANTY**

**Please ask your retailer to either stamp this warranty or simply attach your store receipt. Keep this warranty somewhere safe. DO NOT SEND TO PRIMA.**

**This guarantee in no way affects your rights under statutory law.**

**IF THE PRODUCT MALFUNCTIONS DURING ITS WARRANTY PERIOD IT MUST BE RETURNED TO THE RETAILER FROM WHOM IT WAS PURCHASED FOR REPLACEMENT. IF YOU BOUGHT THIS PRODUCT VIA MAIL ORDER, PLEASE KEEP ALL THE DOCUMENTATION THAT CAME WHEN THE UNIT WAS DELIVERED.**

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_  
\_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

DATE OF PURCHASE \_\_\_\_\_ MODEL \_\_\_\_\_

Please do not call us regarding warranties, your warranty exists with the retailer that you bought the product from. If the product malfunctions during its warranty period it must be returned to the retailer from whom it was purchased for replacement. If you bought this product via mail order, please keep all the documentation that came when the unit was delivered.

Nu-World UK Ltd, Prima House, 15 (2D) Springfield Commercial Centre, Bagley Lane, Leeds. LS28 5LY United Kingdom [www.buyprima.com](http://www.buyprima.com)