

~~~~~ Warranty ~~~~~

This product is guaranteed for 12 months from the date of purchase when the appliance is used solely for domestic purposes. For commercial use the product is guaranteed for 90 days from the date of purchase.

The guarantee is valid against mechanical or electrical defects if the product is used in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled, interfered with or damaged in any way.

IMPORTANT, PLEASE RETAIN THIS WARRANTY

Please ask your retailer to either stamp this warranty or simply attach your store receipt. Keep this warranty somewhere safe. DO NOT SEND TO PRIMA.

This guarantee in no way affects your rights under statutory law.

**IF THE PRODUCT MALFUNCTIONS DURING ITS WARRANTY PERIOD
IT MUST BE RETURNED TO THE RETAILER FROM WHOM IT WAS
PURCHASED FOR REPLACEMENT. IF YOU BOUGHT THIS PRODUCT
VIA MAIL ORDER, PLEASE KEEP ALL THE DOCUMENTATION THAT
CAME WHEN THE UNIT WAS DELIVERED.**

NAME _____

ADDRESS _____

PURCHASED FROM _____

DATE OF PURCHASE _____ MODEL _____

Nu-World UK Ltd. Prima House, 15 (2D) Springfield Commercial Centre,
Bagley Lane, Leeds. LS28 5LY United Kingdom

© Copyright 2006 Nu-World UK Ltd. All rights reserved.

prima

Cordless S/S Kettle



User Guide

Model: PCC037

Visit our web site
www.buyprima.com

CONNECTION TO THE MAINS SUPPLY

The wires in the mains lead are coloured in accordance with the following code:

BROWN - **LIVE (L)**
BLUE - **NEUTRAL (N)**
GREEN/YELLOW - **EARTH (E)**


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The BLUE wire is the NEUTRAL and must be connected to the terminal which is marked with the letter N or coloured BLACK
- The BROWN wire is the LIVE and must be connected to the terminal which is marked with the letter L or coloured RED.
- The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked E or coloured GREEN or GREEN/YELLOW.

Always ensure that the cord grip is positioned and securely fastened.

WARNING: THIS APPLIANCE MUST BE EARTHED.

WIRING FOR A 13AMP PLUG

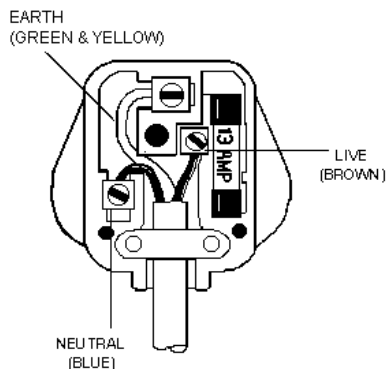

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:-

READ ALL INSTRUCTIONS

- Always unplug the kettle in the following situations:-
 - Before cleaning
 - Before leaving the kettle unattended
- Do not unplug the kettle by pulling the cable cord.
- Do not let the cord hang down over the counter edge.
- **Always ensure the lid is secure before boiling or pouring**
- **Keep the kettle out of reach of children.**
- Improper use of kettle may result in serious scald.
- Never switch on the kettle when the water level inside is higher than the indicated maximum level or lower than the minimum level. Otherwise, this will cause water spillage and damage to the heating element respectively. Though there is a cut-off device if the kettle overheats, allowing the unit to boil dry will eventually damage the heating element.
- Do not touch the exterior of the kettle, except the insulated handle, as it will be very hot.
- Never place the kettle on a hot surface.
- If the supply cord of this appliance is damaged, it must only be replaced by a qualified electrician.
- The kettle is only to be used with the stand provided.
- **NEVER FILL THE KETTLE ABOVE THE MAX WATER LEVEL**

SAVE THESE INSTRUCTIONS

Prior to First Use

- Remove all packing materials from the inside and outside of the kettle.
- BOIL FRESH WATER INSIDE THE KETTLE TWO TO THREE TIMES AND DISCARD THE BOILED WATER BEFORE NORMAL USE

How to Use

- Always use the appliance on a heat-resistant, flat surface.
- Fill the kettle with the desired quantity of cold water between the Min. and Max. level. You can either open the lid to fill the kettle or fill through the spout. A S/S water filter is fitted to the kettle.
- Close the lid securely. You will hear it click when it is closed securely.
- Plug the kettle into the wall socket and press the 'ON/OFF' switch to the ON position. The pilot light will then be illuminated.
- When the water has boiled, the kettle will switch off automatically.

Cleaning

- It is extremely important to remember that cleaning of the kettle can only be performed when the kettle has been switched off and unplugged.
- Never immerse any part of the kettle especially the cable and base plate into water.
- Cleaning should be performed when the kettle has cooled down.
- Always ensure the electrical connections of the kettle remain absolutely dry.
- Clean the kettle with a damp cloth. Do not use cleaning products, which can cause health hazard or discoloration of the kettle.
- Ensure the outside and the electrical connection parts of the kettle are completely dry before using.

De- scaling

- It is important to de-scale the kettle at regular intervals in order to maintain its efficiency.
- The frequency of de-scaling will depend upon the area in which you live. There are many de-scaling powders and tablets available in supermarkets & hardware stores. Just follow the instructions on the packet.