

Please keep these instructions

Please read these instructions carefully and familiarise yourself with your new product before using for the first time.

1. CURRENT
230 ~ 50Hz 150W
Ensure that the voltage indicated on the identification plate corresponds with the mains voltage.

2. FITTING OF 3 PIN PLUG

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

Blue	-	Neutral
Brown	-	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-
The wire which is coloured **blue** must be connected to the terminal which is marked with the letter 'N' or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

This is a double insulated appliance. On no account should you connect either wire to the earth pin of the plug

~~~~~ Warranty ~~~~~

This product is guaranteed for 12 months from the date of purchase when the appliance is used solely for domestic purposes. For commercial use the product is guaranteed for 90 days from the date of purchase.

The guarantee is valid against mechanical or electrical defects if the product is used in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled, interfered with or damaged in any way.


IMPORTANT, PLEASE RETAIN THIS WARRANTY

Please ask your retailer to either stamp this warranty or simply attach your store receipt. Keep this warranty somewhere safe. DO NOT SEND TO PRIMA.

This guarantee in no way affects your rights under statutory law.

IF THE PRODUCT MALFUNCTIONS DURING ITS WARRANTY PERIOD IT MUST BE RETURNED TO THE RETAILER FROM WHOM IT WAS PURCHASED FOR REPLACEMENT. IF YOU BOUGHT THIS PRODUCT VIA MAIL ORDER, PLEASE KEEP ALL THE DOCUMENTATION THAT CAME WHEN THE UNIT WAS DELIVERED

prima

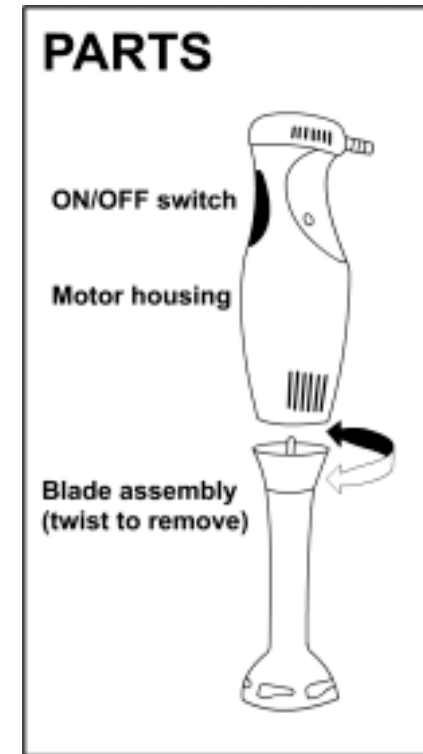

Stick Mixer Model: PFP100

User Guide

Visit our web site!

<http://www.prima-international.com>

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:-

READ ALL INSTRUCTIONS

- Allow the motor to come to a full stop and disconnect from the mains supply before touching the blade or removing the blade assembly.
- To avoid unnecessary splashing of food always ensure the blade is submerged when in use.
- Keep the cable away from the mixing blades when in use.
- To protect against electrical shock, do not immerse cord, plugs, or motor unit in water or other liquid.
- **Close supervision is necessary when any appliance is used by or near children.**
- Unplug from outlet when not in use and before cleaning
- Do not use for more than 1 minute (constant use). Allow to rest for at least 3 minutes between uses.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been managed in any manner. See warranty.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not let cord hang over the edge of the table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heater oven.
- To disconnect, remove plug from outlet.
- Do not use this appliance for other than intended use. This appliance is for household use only.
- Do not use outdoors.
- No liability can be accepted for any damage caused by noncompliance with these instructions or any other improper use or mishandling.

SAVE THESE INSTRUCTIONS

BEFORE USING STICK MIXER FOR THE FIRST TIME

Remove the blade assembly & rinse thoroughly in hot water. Dry, and then refit to the main motor housing.

OPERATING INSTRUCTIONS

1. Place ingredients in a cup, bowl or other suitable vessel.
2. When processing fruit, vegetables etc ensure these are chopped and add a little water if necessary.
3. The slow speed is suitable for finely chopping ingredients. The fast setting is suitable for pureeing food.
4. Tip: **Mashed potatoes.** Boil potatoes as normal and drain. Use stick mixer to make perfect, lump-free mash! The slow speed is usually sufficient.

USES

- **Bread crumbs:** Place bread in a deep bowl & use stick mixer on slow speed for best results. Feel free to add other ingredients like onion, mince meat etc.
- **Soups:** Boil ingredients as usual. When ready submerge mixing blade in the soup & use slow speed to finely chop/blend ingredients.
- **Milk shake:** Put 1 banana, 2/3 cup of milk, 1 tbsp of honey, 1 scoop ice cream into a tall jug. Use fast setting & blend for 30 seconds to 1 minute
- **Baby food:** Place cooked meat, veg, fruit etc into a tall jug. Use fast setting for 30 seconds to 1 minute to puree.

CLEANING

- BEFORE CLEANING ALWAYS UNPLUG THE STICK MIXER.
- Remove the blade assembly & wash thoroughly in hot soapy water. Dry thoroughly before refitting to the motor unit. You can wash the blade assembly in the dishwasher if you wish.
- DO NOT immerse the motor unit in water! This can be cleaned using a cloth moistened with a mild detergent solution.