

Please keep these instructions

Please read these instructions carefully and familiarise yourself with your new toaster before using for the first time.

1. CURRENT
 - 230-240V ~ 50Hz 920W
 - Ensure that the voltage indicated on the identification plate corresponds with the mains voltage.
2. FITTING OF 3 PIN PLUG

WARNING THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

Green and Yellow	-	Earth
Blue	-	Neutral
Brown	-	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: -
The wire, which is, coloured **green & yellow** must be connected to the terminal in the plug, which is marked with the letter 'E' or the earth symbol or coloured **green** or **green & yellow**
The wire which is coloured **blue** must be connected to the terminal which is marked with the letter 'N' or coloured black.
The wire, which is coloured brown, must be connected to the terminal, which is marked with the letter 'L', or coloured red.

EEC DECLARATION OF CONFORMITY

This product conforms to the essential requirements of:

1. The Electromagnetic Compatibility Directive 89/336/EEC and, where appropriate, all modifications & amendments thereto.
2. Low Voltage Directive 73/23/EEC and, where appropriate all modifications & amendments thereto.

Prima International Plc, Prima House, Premier Park, Oulton, LEEDS LS27 8ZA, United Kingdom

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:-

READ ALL INSTRUCTIONS

- Before switching 'ON', ensure that the voltage on the rating plate is the same as in your home.
- Ensure that the wall plug current output is adequate (900Watts).
- Do not touch hot surfaces. Allow the toaster to cool before moving.
- Use the toaster without bread for the first time. There will be some smoke at first: this is normal.
- The toaster reaches very high temperatures, particularly in the area of the opening for the bread.
- Bread may burn. This toaster must not be used near or below curtains and other combustible materials.
- Do not place the cable or any other object over the bread openings whilst the toaster is in operation.
- To protect against electrical shock, do not immerse cord, plugs, or appliances in water or other liquid.
- **Close supervision is necessary when any appliance is used by or near children.**
- **Do not leave the toaster unattended whilst in operation.**
- Unplug from outlet when not in use and before cleaning. Allow to cool before packing away.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been managed in any manner. See warranty.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not attempt to dislodge food while the toaster is in operation.
- Toasting lever must be in the 'UP' position before attaching or disconnecting the plug from wall outlet.
- **Do not insert metal objects or any other utensils into the toaster, as this could cause an electric shock or cause a fire.**
- Do not let cord hang over the edge of the table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heater oven.
- To disconnect, remove plug from outlet.
- Do not use this appliance for other than intended use. This appliance is for household use only.
- **NEVER use the toaster without the crumb tray.**
- Do not use outdoors.
- No liability can be accepted for any damage caused by noncompliance with these instructions or any other improper use or mishandling.

SAVE THESE INSTRUCTIONS

BEFORE USING TOASTER FOR THE FIRST TIME

Clean the outside of the toaster as described under "CLEANING".

With the Browning control adjusted to the maximum setting, operate the toaster without bread for 3-4 minutes. During this time the toaster may emit some odours. These odours are normal for a toaster being used for the first time. The room should be ventilated during this period.

Allow the toaster to cool to room temperature. The toaster is ready now for normal use.

OPERATING INSTRUCTIONS

1. Ensure lever is in the up position before plugging toaster into wall outlet.
2. Select the desired level of browning on the browning control. This will vary according to the moisture content and thickness of the bread; old bread toasts quicker than fresh.
3. After selecting the desired level, place bread in slots and press lever downwards until it locks. When toasting only one slice, set the browning control to a low setting – either slot can be used. Toaster slot will automatically adjust to accommodate different bread thickness.
4. Once the browning level has been reached, the bread will pop up automatically. The bread carriage will have returned to its up position and have disconnected the element, it is now ready for the next toasting.
5. If the toast jams in the slots, the toaster **must** be unplugged and the bread removed **only** when the toaster has cooled down. Do not use any metal implements.
6. **Cancel Button:** if you wish to cancel the toasting cycle at any stage during its operation, depress the cancel button.
7. **Reheat Feature:** if you wish to reheat toast which has previously been cooked, place the toast in the slots and depress the lever downwards until it locks, then press the Reheat Button. The reheat indicator will illuminate to confirm activation of reheat function. After about 30 seconds the reheated bread will pop up automatically. Note: The reheat time is independent of browning control setting.
8. **Defrost Feature:** to toast frozen bread, place bread in the slots and depress lever downwards until it locks, then press Frozen Bread button. The red indicator will illuminate to confirm activation of function
9. Ensure lever is in up position before disconnecting.

CLEANING

- BEFORE CLEANING ALWAYS UNPLUG THE TOASTER AND ALLOW TO COOL FULLY.
- Remove the crumb tray and brush crumbs away. If necessary wipe with a clean damp cloth. Dry thoroughly before reinserting the tray.
- DO NOT use abrasive cleaners as they may damage the surface.
- DO NOT immerse the appliance in the water.

prima

2 slice electronic toaster



Model: PTT450

User Guide

Visit our web site!

<http://www.prima-international.com>

WARRANTY

This product is guaranteed for **12 months** from the date of purchase when the appliance is used solely for domestic purposes. For commercial use the product is guaranteed for **90 days** from the date of purchase.

The guarantee is valid against mechanical or electrical defects if the product is used in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled, interfered with or damaged in any way.

IMPORTANT, PLEASE RETAIN THIS WARRANTY

Please ask your retailer to either stamp this part of the instruction book and date it accordingly or simply attach your store receipt. Keep this warranty somewhere safe. DO NOT SEND IT TO PRIMA.

This guarantee in no way affects your rights under statutory law.

IF THE PRODUCT MALFUNCTIONS DURING ITS WARRANTY PERIOD IT MUST BE RETURNED TO THE RETAILER FROM WHOM IT WAS PURCHASED FOR REPLACEMENT. IF YOU BOUGHT THIS PRODUCT VIA MAIL ORDER, PLEASE KEEP ALL THE DOCUMENTATION THAT CAME WHEN THE UNIT WAS DELIVERED.